

2015-2020 Ford F-150 | Easy | 30 minutes | \$28 DIY

TOOLS

Flathead Screwdriver Phillips Head
Screwdriver Socket Wrench Set 10mm
Socket Trim Removal Tool Flashlight
Gloves Safety Glasses

PARTS

Cabin Air Filter CF12150 \$20.00
Glove Compartment Support Rods
FL3Z-78018A10-A \$5.00
Glove Compartment Door Bumpers
FL3Z-78018A10-B \$3.00

STEPS

- 1 Locate the Air Filter Box - Open the hood and locate the rectangular air filter housing** box, usually near the front of the engine bay on the driver's side. Informational DIY. EZ Car Fix is not a shop.
- 2 Open the Air Filter Housing - Release the metal clips or unfasten the latches securing** the air filter box lid. Some models use screws - use the appropriate screwdriver or socket.
- 3 Remove the Old Filter - Lift the lid and carefully remove the old air filter.** Note the orientation so the new filter goes in the same direction (filter pleats typically face the engine).
- 4 Clean the Housing - Wipe out any leaves, dirt, or debris from inside the air filter box** with a clean rag or vacuum. A dirty housing will immediately contaminate the new filter.
- 5 Install the New Filter - Place the new air filter into the housing, matching the** orientation of the old one. Ensure it seats flat with no gaps around the edges.
- 6 Close and Secure - Reinstall the lid, ensuring the tabs align properly. Reconnect the** clips, latches, or screws. Start the engine and verify there are no unusual sounds or air leaks.