

2008-2021 Lexus LX | Easy | 10-15 minutes

TOOLS

No tools required (hand-operated panels)

PARTS

Cabin air filter (correct for 2008-2021 Lexus LX570)

STEPS

- 1 Open the glove box -** Open the passenger-side glove box fully. Empty it so you can access the panels behind it.
- 2 Set the HVAC to recirculate -** If you do not see the filter housing, press the recirculation button. On the LX570 the filter carrier moves into view in recirc mode.
- 3 Remove the glove box shelf and panel -** Pull out the glove box shelf. Then remove the plastic panel behind it to expose the cabin filter cover.
- 4 Open the filter cover -** Release the accordion-style filter cover. Pull it up and forward to open it.
- 5 Remove the old filter -** Slide the old cabin filter out of its housing. Note the airflow arrow direction on the frame.
- 6 Install the new filter -** Insert the new filter with the airflow arrow pointing the same direction as the old one. Make sure it sits flat.
- 7 Reassemble the panels -** Close the filter cover. Refit the plastic panel and the glove box shelf.
- 8 Verify airflow -** Close the glove box and start the vehicle. Run the fan to confirm strong, clean airflow from the vents.