

2002-2007 Saturn Vue | Moderate | 60-90 minutes

TOOLS

Floor jack and jack stands Lug wrench
Socket set Caliper piston compressor
Caliper hanger Wire brush Brake cleaner
spray Silicone brake grease Torque
wrench

PARTS

Front brake pad and rotor set
Brake cleaner spray
Silicone brake grease

STEPS

- 1 Raise the Vue and remove the wheel - As the 2CarPros tutorial shows for the 2002-2007**
Vue, start by loosening the front lug nuts on level ground. Raise the front of the Vue, secure it on jack stands, and remove the wheel. Review all safety precautions in the video before to...
- 2 Remove the caliper and pads - Remove the caliper guide bolts and lift the caliper off the**
rotor, supporting it with a hanger so the hose carries no weight. Slide the worn pads out of the bracket and inspect the rotor surface for deep scoring. Note the hardware clip pos...
- 3 Service the rotor and hub face - If replacing rotors, unbolt the caliper bracket and**
slide the old rotor off. Clean the hub mating surface thoroughly with a wire brush - the number-one cause of post-job pulsation is rust trapped under the new rotor. Clean the bracket sl...
- 4 Service pins, compress piston, fit clips - Lubricate the caliper guide pins with silicone**
brake grease and verify they slide smoothly in their bores. Compress the caliper piston fully back into its bore with a piston tool. Install the new hardware clips into the bracket ears.
- 5 Install pads and reassemble - Slide the new pads into the greased clips, friction side**
toward the rotor, and confirm they move freely. Reinstall the caliper over the pads and torque the guide bolts; torque the bracket bolts with thread-lock if the bracket was removed....
- 6 Seat the pistons, test, and bed the pads - Pump the brake pedal until it firms up and**
check the master-cylinder fluid level. Take the Vue for a careful low-speed test, then bed the pads with several moderate stops from 35 mph. Recheck the lug nut torque after the test drive.